

# **USERS MANUAL**

TYPE: S-20A

REPORTOPHONE

## PAC EELA AUDIO

Parmentierweg 3

5657 EH Eindhoven Airport PHONE: (+31) (0)40 2510484

TELEFAX: (+31) (0)40 2570482



## 1. APPLICATIONS

The EELA AUDIO S20A REPORTOPHONE<sup>®</sup> can be seen as a universal, multifunctional tool for the radioreporter. Except for the primary purpose, sneding programm-contributions to the studio via the public telephone-net, a number of extra facilities is available, shown very useful in practice. These facilities are:

- 1. Making a connection with the studio and sending contributions via microphone and/or tape with monitoring of the returnsignal, to be mixed with the direct signal. Making the connection can be done with the via the numeric keypad with a choice of tone- or pulse dialling for use with all kinds of telephonelines.
- 2. Making a connection for doing a telephone-interview and recording this on a connected tape- or cassette recorder. The balance between the own contribution (via the microphone) and the contribution from the telephoneline can be adjusted for optimum results.
- 3. The use of the REPORTOPHONE as portable mixer for recording with inputs for microphone and line/tape with internal compresor/limiter for levelcontrol, a feature very useful as addition to many reportermachines without a good automatic levelcontrolfacility.

To enable the use both at home and in the field, the unit can be powered either from the internal batteries or a mainsadapter with automatic changeover. The current consumption is that low, that a set of batteries (2 each 6F22 9 Volt alkaline cells) last for at least 20 hours. Replacing of them can be done guick without any tools.

#### 2. CONNECTIONS

All connections are located on the backpanel of the REPORTOPHONE<sup>®</sup>, as much as possible by professional, heavy duty connectors for maximum reliability.

#### Available are:

#### 1. MICROPHONE INPUT (MIC)

Made via a fermale XLR, balanced for using almost any kind of dynamic or (professional) electret microphone. The sensitivity can be controlled such, that optimum modulation can be achieved in almost any situation.

#### Connections are:

pin 1: screen

pin 2: in phase signal (+)

pin 3: out phase signal (-)

#### 2. LINE INPUT (TAPE)

Also on a female XLR and balanced. Both professional sources with high level and balanced outputs as consumer equipment with lower level and unbalanced character with higher impedances can be used without problems.

#### Connections are:

pin 1: screen

pin 2: in phase signal (+)

pin 3: Out phase signal (-)

When unbalanced sources are used, pin 1 and pin 3 have to be wired together.

#### 3. RECORD OUTPUT (RECORD)

This is an unbalanced output on a male XLR for connection to a line-input of a recorder for recording of the mix of the contribution of the telephoneline and the microphone/tape signal, the same signal that can be heard on the headphone output.

#### Connections are:

pin 1:

ground/screen

pin 2:

signal

pin 3: ground/screen

The level depends mainly on the telephoneline, but is nominal  $+6\,\mathrm{dBu}$ , direct suited for professional machines. For use with (more sensitive) consumer equipment an in line attenuator of 10 dB, consisting of a 10 kOhm resistor in series and a 4k7 parallel to the machineinput is recommended. This can be made in the adapterlead.

#### 4. HEADPHONE OUTPUT (HPH)

This is a 1/4" stereo jack connection as used for stereo headphones. The outputsignal is MONO, but a stereo headphone is recommended, preferably with an impedance of 600 Ohm for the best results. A mono headphone, like on of a headset combination has to be wired with "signal" on TIP and RiNG and "ground" to SLEEVE. This "ground" may not be connected with the screen of the microphone input because of the balanced character of the headphone output with signal on both wires. This has been done to produce the maximum outputlevel and the lowest current consumption with the given battery voltage. The use of lower impedance headphones is possible with less outputlevel and more current drawn.

#### 5. PTT CONNECTION (PTT)

This is the connection with the telephone-net by means of a 4-pole modular jack. Only two wires are in use, RED and GREEN for the speech circuit (A and B wires) only. Suitable adapters are available in most countries as are extender leads. The cable supplied has a modular jack on one end and spade connectors on the other.

This wiring will work on most installations. In those cases that dialling is not possible on the REPORTOPHONE, a parallel connection with the existing telephone can be a solution. Then the connection has to be made with the telephone while the REPORTOPHONE® is OFF and than be switched on, leaving the receiver OFF HOOK or disconnecting the telephone.

#### 6. POWER CONNECTION (PWR)

A special mainsadapter is supplied with the S20A, connected via a 3- or 5 pin DIN. This adapter is safe and is the only one that may be used.

When the mainsadapter is used, the internal batteries are automatic disconnected, but will take over when the mainsplug is removed by accident. For "stationary" use it is recommended to remove the batteries to prevent leakage and so damage of the equipment. Always use ALKALINE batteries because these give the longest working time and the best "time for money". Also have a set of spare batteries at hand e.g. in the case for emergencies. Batteries can be replaced simple by opening two lids in the bottom of the unit and connecting two new ones to the leads there. There is an indication on the frontpanel labelled "BATT LOW", whichs lights up when only a short time of working is left. when this indication shows, it is time to replace the batteries or to use the mainsadapter.

#### 3. OPERATION

## 1. DIRECT CONTRIBUTION TO THE STUDIO

#### DIALLING

Connect the S20A via the mainsadapter to the mains or place batteries in it.

Leave the REPORTOPHONE switched off and make the connection to the telephone circuit.

Depress the ON switch, the yellow LED on the frontpanel lights, set the MIX control in the midposition and the headphone control to a comfortable level. Now you must hear a dialling tone. Use the keypad to dial the number and wait for connection. Is dialling not possible in the selected position of the T/P switch (tone- or pulse dialling), switch OFF the unit, select the other postion of the T/P switch, switch ON and try again.

For PULSE- dialling a last number memory is available, to be accessed by switching OFF and ON again and depressing the # key. Now the unit will dial the last number.

#### **CALL INDICATION**

While waiting for the studio or to save money (hotel telephone bills!), it is possible to wait for a call from the studio. Leave the REPORTOPHONE connected to the line in the OFF position. When the studio calls, an internal buzzer sounds and the connection can be taken by depressing the ON switch. For some house exchanges not the S20A will indicate, but the telephone. In that case the receiver has to be lifted and the connection has to be taken over by the REPORTOPHONE then.

## SETTING THE MICROPHONE LEVEL (MIC CONTROL)

Speak into the microphone with the expected loudness and open the MIC control up to the position, that one or two green LED's light in the rhytm of the speech with occasional action of the red LED in peaks. This is the optimum modulation with the least side-effects and the strongest signal in the studio. In case of unexpected high peaks, they will be "caught" by the compressor/limiter, so distortion is prevented.

## **MIC OFF SWITCH**

When a contribution consists of both speech via the microphone and an item off tape, the MIC OFF switch can be used to switch off the microphone temporally with the setting still there. It is also advised to use this switch when only a tape is played to the studio to prevent ambiance noise to be sent with the tape and to allow a fast changeover to the microphone for communication.

#### SETTING THE TAPE LEVEL (TAPE CONTROL)

The same rules are valid here as for setting the microphone level. A fast ON/OFF switch is not available here, because the PAUSE function of the tapemachine can be used for this purpose. The noise contribution of the tapemachine in pause is negligible.

#### **MIX CONTROL**

This control has influence both on the RECORD output and on the HEADPHONE MONITORING. With the control in the CCW position (MIX), only the output of the mixer (mic and/or tape) can be heard and recorded; with the control clockwise (TEL) then only the signal from the telephoneline can is available. This signal is not only that from the studio, but also the mixer output can be heard because of the less than ideal damping of the HYBRID circuit, caused by the often very complex impedance of the telephoneline. Also the character of this leakage differs per connection. A comfortable listening is often achieved by setting the MIX control in the mid position, so adding enough high quality signal from the mixer for comfortable listening.

#### **SETTING HEADPHONE LEVEL (PHONES)**

This can be set to the taste or the need of the user.

## 2. RECORDING A TELEPHONE INTERVIEW

#### **SETTINGS**

The basic settings are the same as those for a contribution to the studio with an extra for recording the item.

#### SETTING THE RECORDING LEVEL

The recording output level of the REPORTOPHONE® can not be set, so this has to be done on the machine. The best time to do this is during the first conversation.

The MIX control allows for setting the balance between the own contribution and the one from the caller and this has to be done for equal loudness. Checking is easy, because the same mix appears on the headphones.

If the "leakage" of the telephoneline is in fact too much, it does have advantage to mix some "own" signal in, because this gives a better soundquality on tape of the microphone signal. Also here is the midposition often the best one. With really low level from the telephoneline, turn the MIX control more CW, for a too strong signal more CCW.


#### 3. USE AS MIXER

Also here are the basics for setting the levels of microphone- and tape input and the recording alignment the same as described ahead. Ther is one (important) difference: Because in this operational mode NO TELEPHONELINE is connected, the hybrid circuit is fully out of balance, giving a high level signal back with a bad soundquality. To prevent recording of this, it is mandatory to set the MIX control to the full counter clockwise (= MIX) position.


Applications of the S20A as mixer only are the use of the mix-possibility of a microphone and a linelevel source (e.g. ambience sound off tape) for recording items or the use of the internal compressor/limiter for microiphone recordings with an almost automatic levelcontrol for maximum loudness and without distortion.

A trick is simulating a telephone contribution by mixing some "leakage" in the signal by setting the mixcontrol deliberate in the "wrong" position to create the telephone sound!

## NORMAL TELEPHONE CONNECTION TO HOUSE EXCHANGE

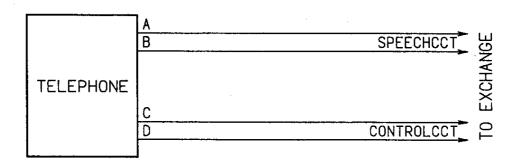

## S20A CONNECTED TO HOUSE EXCHANGE

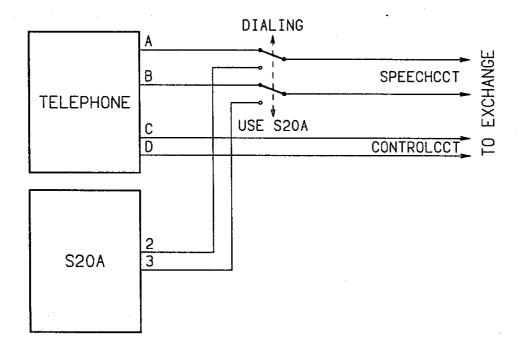

## OPERATION:

WITH THE SWITCH IN THE POSITION "DIALING", USE THE TELEPHONE FOR MAKING THE CONNECTION.

SWITCH ON THE S20A AND REVERSE THE SWITCH TO THE "USE S20A" SETTING

LEAVE THE RECEIVER OF THE TELEPHONE OFF THE HOOK, OTHERWISE THE CONNECTION WILL BE BROKEN!

ſ	<b>G</b> EELA	PROJ : S20A						SCH	PCB	DATE	DRW
	PARMENTIERWEG 3				,		1				*
		S20A ON HOUSE EXCHANGE				Έ	2				
Į	EINDHOVEN NL						3				
	FILE :		SERIE	:		A4V	4				

SPECIFICATIONS EELA AUDIO S 20 A REPORTOPHONE.

Note: Specifications are made with all controls fully opened.

Inputs :

tape
mic
electronically balanced, 50 k Ohms
electronically balanced, 1200 Ohms

Outputs:

- record : unbalanced, 100 Ohms

- headphone: electronically balanced, 100 Ohms

Inputsensitivity for 2 dB gainreduction:

-tape input: - 14 dB -mic input: - 60 dB

Gain between tel.line and record output: 12 dB

Sendlevel tel. line : see compressor-limiter curve. frequency response : see bandpass curve of send path

Headphone output : + 16 dB at 600 Ohms for THD+N < 0.2 %.

Power supply : By means of VDE approved mainsplug

transformer or by two 9 volt batteries

(type 9F22).

Power consumption : < 30 mA. (about 20 hours on 1 set of

batteries)

Dimensions (WxHxD) :  $180 \times 60 \times 190 \text{ mm}$ .

Weight : about 1.8 Kg.

